

Tots in Mind

Assembly Instructions For Cozy Crib Tent II


Ages 0-36 Months

Pat. #6,550,083 B1

WARNING:

KEEP COZY CRIB TENT II AWAY FROM FLAMES, CIGARETTES AND ALL HEAT SOURCES.

FRONT VIEW (ZIPPER SIDE)

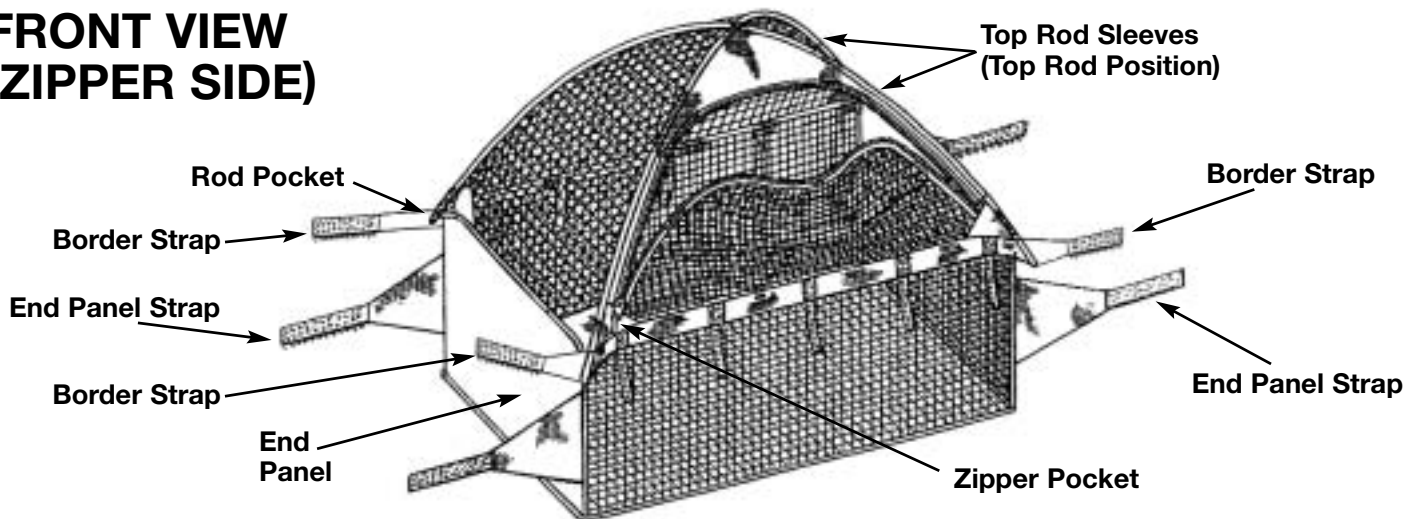


**If using bumper pad, place on OUTSIDE of netting (between crib rungs and net).*

MATERIALS LIST:


- 6 Rod Sections
- 1 Poly Bagged Cozy Crib Tent II

To be assembled by an adult

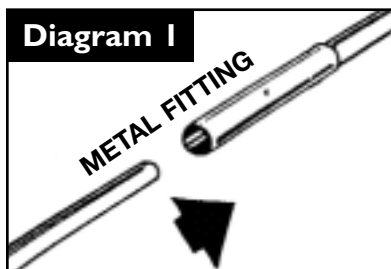

STEP 1:

Assemble the two top rods, each made up of 3 sections (2 with metal fittings, 1 without) creating two completed top rod assemblies (see diagram 1).

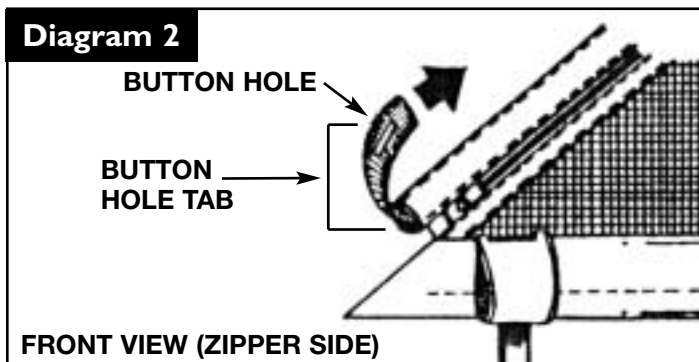

STEP 2:

INSERTING THE 2 COMPLETED TOP ROD ASSEMBLIES

Locate the 2 button holes at front (zipper side) end of each top rod sleeve. Insert one completed rod assembly into each of the 2 button holes (see diagram 2) making sure each rod assembly is all the way into its reinforced rod sleeve at back end of unit, leaving both rod assemblies slightly sticking out of button hole until Step 3.

WARNING:

Keep rods pointed away from face and pointed in safe direction. Top rod tension could cause a spring-back action during assembly!

Diagram 3


PUSH WITH PALM →
BUTTON HOLE TAB →



STEP 3:

Once both completed top rod assemblies are in their respective sleeves (making sure each rod assembly is all the way into its reinforced rod sleeve at back end), use a push-pull method to completely cover both top rod assemblies. Cover exposed end of rod assemblies by grasping material in one hand and pushing rod assembly in with palm of other hand until rod is completely covered and tucks back into its reinforced button hole tab forming dome of tent.

COMPLETELY COVERED ROD TUCKED PROPERLY INTO REINFORCED BUTTON HOLE TAB.

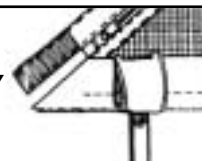

Diag. 4

WARNING:

Total structural integrity is only achieved when rod ends are inserted into pockets

STEP 4:

Place the four top rod assembly ends into their respective pockets located on the end of each border **INSIDE THE FOLD** of the border strap by slightly bowing the end of each rod with one hand and grasping pointed tip end of border with other hand, so it will gently slip into pocket. See diagram 4. **(DO NOT attempt to stretch pocket over rod ends. Gently pull rod pocket TIP and bow rod into pocket.)** The inserted rod end in its pocket then sits **INSIDE THE FOLD** of the border strap material.


Please see reverse side for further directions!

STEP 5:

- Remove mattress from crib.
- Crib frame **MUST** be set to the **LOWEST** setting.
- If you are using a bumper pad, attach it to crib rungs **BEFORE** placing tent on crib (bumper pad placement is **BETWEEN** crib rungs and net.)
- Place assembled tent on crib (making sure zipper opening faces front) with Crib Tent dome portion resting on top of crib rails (see diagram 8 for placement) allowing inside surround net to hang freely inside crib (bottom netting rests on top of mattress frame).


WARNING:

DO NOT add additional strings, straps, hook & loop, etc. to attach tent to crib!

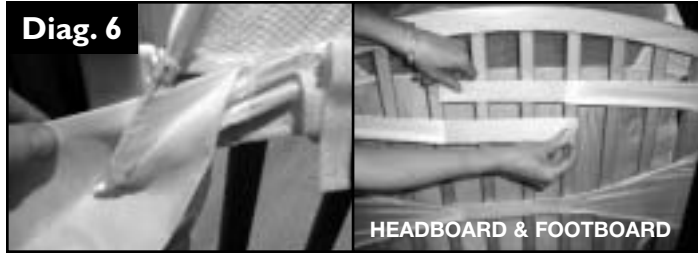

STEP 6:

Secure border straps (making sure rod end, already inserted in pocket, is now **INSIDE THE FOLD** of border strap material). See Diagram 6, by pulling straps **VERY** tightly around outside ends of crib, sticking hook & loop straps together. Repeat, attaching end panel straps.

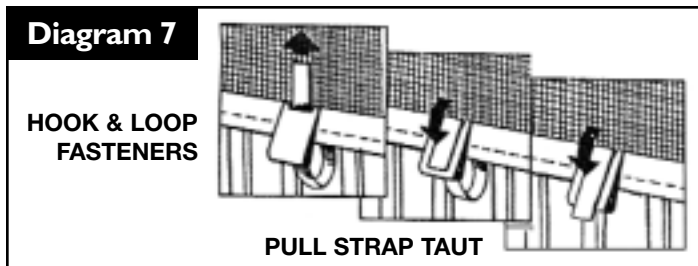

STEP 7:

Secure each hook and loop lock fastener around crib railing (on both sides). Strap goes around railing, up on outside of border, lift hook and loop locking flap up and insert strap through hole pointing upward, then pull locking flap over. **MAKE SURE STRAP IS PULLED TIGHT AROUND THE RAILING.**

The strap then folds down over the flap. Press firmly to secure fasteners.



STEP 7A:

If you feel your child is learning to open the zipper, and to assure tent is securely zipped closed, make sure zipper slide is tucked all the way into its zipper pocket. Incorporate looped tie attached to zipper pull to closest hook and loop lock. Completely undo lock, feed strap through loop, then fasten lock securely as described in Step 7.

IMPORTANT!

PLEASE NOTE THE FOLLOWING:

- When zipping the zipper, always make sure the zipper pull is inserted into its safety pocket.
- When washing or being stored, make sure all hook and loops are properly closed so lint or dirt will not hinder bonding.
- Check all hook and loop fasteners each and every time your Cozy Crib Tent II is in use.
- If your Cozy Crib Tent II does not fit the crib, **DO NOT USE!** Return to place of purchase.
- NOT** to be used as punishment.
- Please save these instructions for future reference.

WARNING:

NEVER leave child unattended unless tent is securely attached to crib and completely zipped. Total structural integrity is only achieved when tent is secured properly and completely zipped.

Diagram 8



STEP 8:

After unit is completely attached to crib, unzip tent & insert mattress. When completed, all 4 sides of inside surround netting & end panel material should be taut around inside walls of crib (weight of mattress stretches material to fit tight — **NEVER USE CRIB TENT II WITHOUT MATTRESS IN CRIB!**) If inside material is bagging, check to make sure mattress frame is on lowest setting.

completely attached unit DOES allow crib rail to lower for easy access to child or bedding.

CAUTION:

ALWAYS MAKE SURE SIDE RAIL IS LOCKED IN ITS UP POSITION BEFORE LEAVING CHILD IN CRIB. NEVER LEAVE CHILD IN CRIB WITH SIDE RAIL DOWN!

Use according to instructions — to be used with (not in place of) parental supervision.

Collapses for easy storage or travel:

- Detach unit from crib
- Squeeze top rods together so unit flattens into a half circle
- Tuck excess material (inside surround net) into flattened dome
- Keep unit closed by wrapping the closest end hook and loop strap around both rod ends then secure strap to lock. (Subject to change for product improvement without notice).

LIMITED WARRANTY

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty performance is rendered.

This warranty only covers failures due to manufacturing defects which occur during normal use. It does not cover damage which results from misuse, abuse, mishandling, alteration, or improper assembly.

There are no other express oral or written warranties with respect to this product, and all warranties implied by law, including any warranties of merchantability or fitness for a particular purpose, are limited in their duration to the 60-day warranty period. (Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.)

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Cozy Crib Tent II is warranted against defects in materials and workmanship for a period of 60 days after the original date of consumer purchase. If the Cozy Crib Tent II should become defective within the warranty period, we will replace it free of charge. Contact Tots in Mind at: info@totsinmind.com

For your convenience, please visit our website for additional products, additional information and the closest retail location near you.

www.totsinmind.com

email: info@totsinmind.com