


Tots in Mind

Assembly Instructions for Cozy Indoor/Outdoor Portable Playard Tent™

Ages 0-36 Months – To be used by one child at a time.

WARNING:
KEEP COZY PLAYARD TENT AWAY FROM FLAMES, CIGARETTES AND ALL HEAT SOURCES.

FRONT VIEW (ZIPPER SIDE)

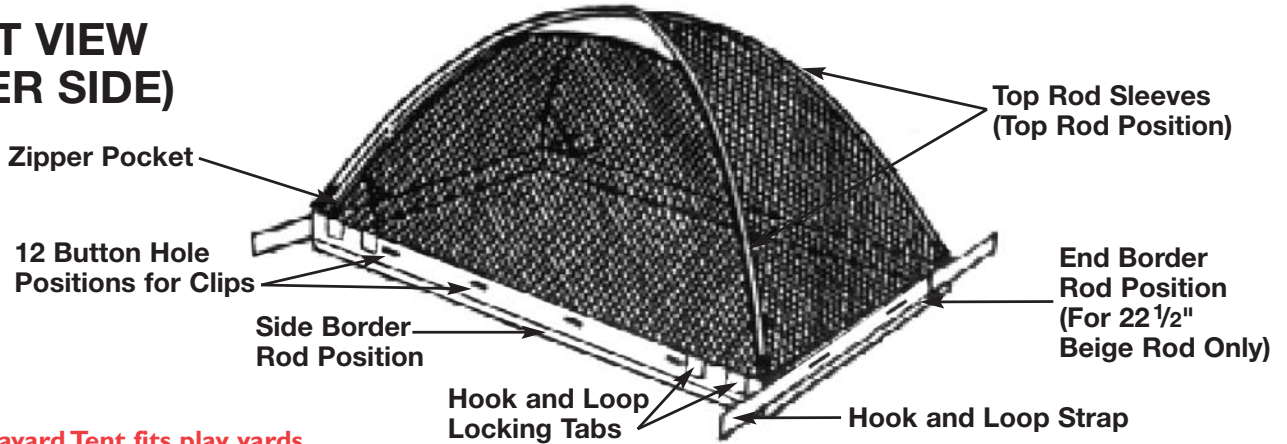


Cozy Portable Playard Tent fits play yards as small as 28" x 40" & as large as 31" x 44".

MATERIALS LIST:

- 12 Rod Sections: 6 natural white top rod sections and 6 beige border rod sections
DO NOT put 2 different colored sections together
- 1 Poly Bagged Portable Play Yard Tent
- 1 Polybag of 12 clips


To be assembled by an adult

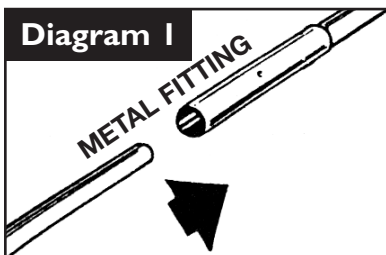

STEP 1:

Assemble the two top rods, each made up of 3 natural white sections (2 with metal fittings, 1 without) creating two completed top rod assemblies (see diagram 1). Then assemble the two side border rods made up of 2 beige sections each (one 19" rod with metal fitting, one 17 1/2" rod without) creating two completed SIDE border rod assemblies leaving two beige 22 1/2" END border rods (set beige rods aside for step 4).

WARNING: Do not commingle white top rods with beige border rods. This will breach structural strength.

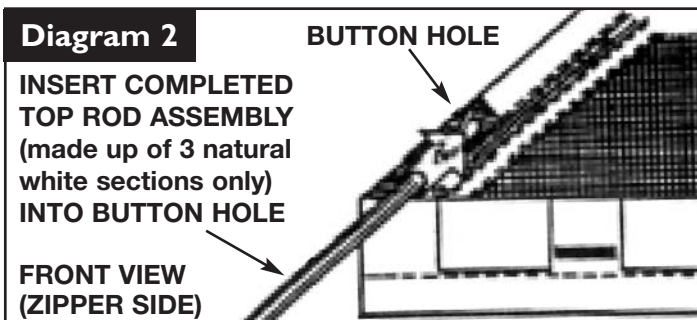

STEP 2: INSERTING THE 2 COMPLETED TOP ROD ASSEMBLIES

*(made up of three natural white sections each)


Locate the 2 button holes at front (zipper side) end of each top rod sleeve. Insert one completed rod assembly into each of the 2 button holes (see diagram 2) making sure each rod assembly is all the way into its reinforced rod sleeve at back end of unit, leaving both rod assemblies slightly sticking out of button hole until Step 3.

WARNING:
Keep rods pointed away from face and pointed in safe direction. Top rod tension could cause a spring-back action during assembly!



STEP 3:

Once both completed top rod assemblies are in their respective sleeves, use a push-pull method to completely cover both top rod assemblies. Cover exposed end of rod assemblies by grasping material in one hand and pushing rod assembly in with palm of other hand until rod is completely covered and tucks back into its reinforced sleeve-end forming dome of tent.

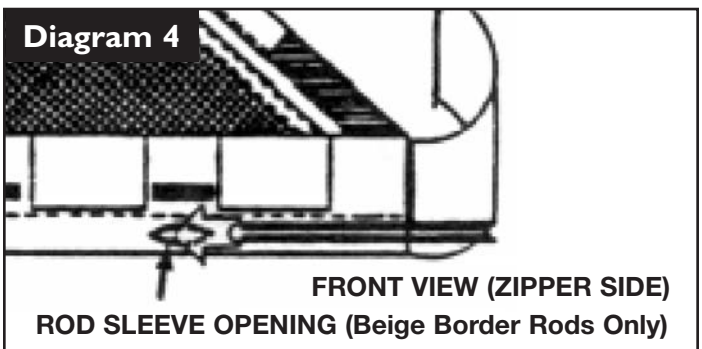

STEP 4: INSERTING THE BEIGE BORDER RODS

Locate the beige border rods from Step 1 (2 assembled SIDE border rods and two 22 1/2" END border rods.) Locate buttonhole slits at one end of each of the 4 borders. Insert a two piece beige border rod assembly into the bottom edge of both SIDE borders and cover completely (see main diagram for SIDE border positioning.) Then insert the two remaining beige 22 1/2" END rods (one in each END border – see main diagram for "END border rod" positioning).

NOTE:
Center border rods in sleeve before installing clips.

Please see reverse side for further directions!

WARNING

Improperly installed clips may lead to entrapment or strangulation. Follow the instructions to ensure proper installation.

DO NOT use your tent if it is damaged or incomplete. To avoid any safety issues please contact Tots in Mind through our website, www.TotsInMind.com or by phone at 800.626.0339.

Diagram 5


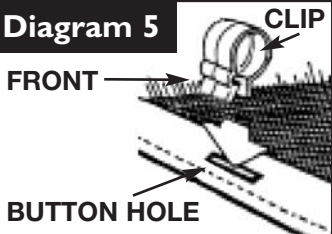


Diagram 6

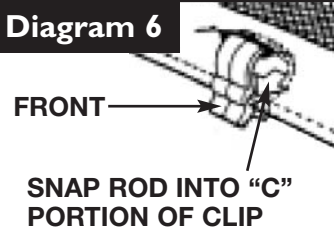


STEPS 5 & 6:

Make sure there are 12 clips for 12 button holes around border of Play Yard Tent.

Place clip in button hole by sliding back of Clip (short end) through button hole (see diagram 5). Front of Clip (long end) should face outward when tent is placed over play yard. Grasp border rod with fingers and place both thumbs on top of clip to snap into place in small "C" Portion of clip. (see diagram 6).

Repeat for all 12 clips.

Diagram 7

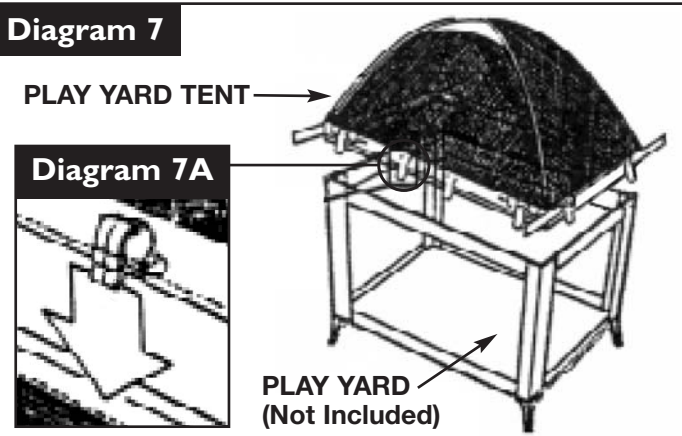

STEP 7:

Once all clips are in button holes and all border rods are snapped into place, secure tent to play yard by flexing clip open with fingers, and pushing down to snap over railing of play yard. (see diagram 7A.) Start along back side (opposite from side with zippered opening).


Once back panel is secure, repeat same procedure on each side, finishing with front of tent. Unzip front of tent for easy access while securing clips to railings of play yard.

IMPORTANT!

PLEASE NOTE THE FOLLOWING:

- When zipping the zipper, always make sure the zipper pull is inserted into its safety pocket.
- When washing or being stored, make sure all hook and loops are properly closed so lint or dirt will not hinder bonding.
- Check all hook and loop fasteners each and every time your Cozy Portable Playard Tent is in use.
- If your Cozy Portable Playard Tent does not fit your playard, DO NOT USE! Return to place of purchase.
- NOT to be used as punishment.
- Please save these instructions for future reference.
- Playard Tent collapses for easy storage or travel. (Subject to change for product improvement without notice.)

Diagram 8

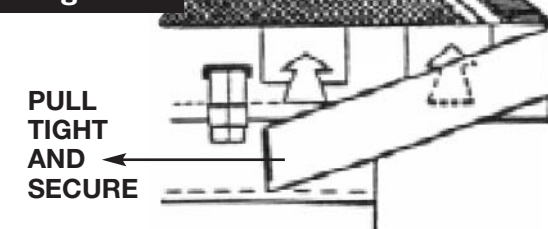

STEP 8:

NOTE: If the rectangular play yard is of a smaller size, pull your hook and loop straps tightly around from sides to front, and from sides to back, until secure. To remove clips from the Cozy Portable Playard Tent, grip the "C" portion (or entire open surface) of the clip and twist gently to the side.

Sunshade Assembly Instructions

Once the Cozy Portable Playard Tent is completely assembled, the Sunshade can be attached.

STEP 1: Sunshade

Has 4 elastic straps with button holes. The 2 short elastic straps go in the back of the playard tent, and the 2 long straps in front. The elastic straps fit through the openings on each of the 4 corners of the playard tent, then each button hole fits over each of the reinforced rod ends.

Collapses for easy storage or travel:

1. Unclip from playard
2. Remove the two 22 1/2" end border rods only
3. Squeeze both top rods together, so unit flattens into half-circle
4. Keep unit closed by wrapping the closest end hook and loop strap around both rod ends then secure strap to lock. It will be in the shape of a flat half-moon. (Subject to change for product improvement without notice).

Use according to instructions — to be used with (not in place of) parental supervision.

WARNING:

NEVER leave child unattended unless tent is securely attached to playard & completely zipped. Total structural integrity is only achieved when tent is secured properly and completely zipped.

LIMITED WARRANTY

This warranty is extended only to the original purchaser. A purchase receipt or other proof of date of original purchase will be required before warranty performance is rendered.

This warranty only covers failures due to manufacturing defects which occur during normal use. It does not cover damage which results from misuse, abuse, mishandling, alteration, or improper assembly.

There are no other express oral or written warranties with respect to this product, and all warranties implied by law, including any warranties of merchantability or fitness for a particular purpose, are limited in their duration to the 60-day warranty period. (Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you.)

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Cozy Portable Playard Tent is warranted against defects in materials and workmanship for a period of 60 days after the original date of consumer purchase. If the Cozy Portable Playard Tent should become defective within the warranty period, we will replace it free of charge. Contact Tots in Mind at: info@totsinmind.com

For your convenience, please visit our website for additional products, additional information and the closest retail location near you.

www.totsinmind.com

email: info@totsinmind.com